 


Getting to know your NAUCON-1000

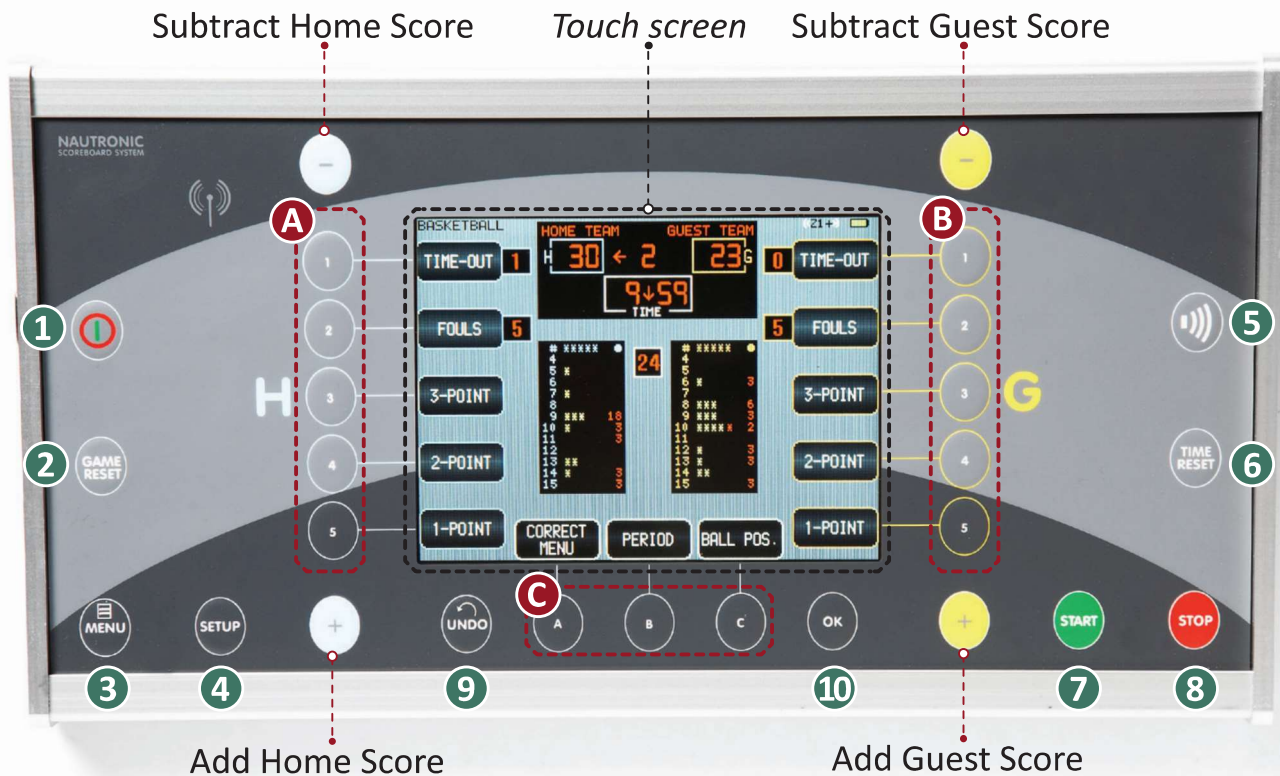

1 On/off

Turn the NAUCON-1000 on and off. When turning off the control panel you must confirm by pressing **ACCEPT** on the touch screen.

2 Game reset

Reset display, you must confirm by pressing **ACCEPT** on the touch screen.

3 Menu

A menu on the touch screen will show (Fig. 1, page 6).

4 Setup

A menu on the touch screen will show.

5 Manual horn

Press to blow the horn.

6 Time reset

Resets time and sets next period time. You must confirm by pressing **ACCEPT** on the touch screen.

7 Start

Game clock starts.

8 Stop

Game clock stops.

9 Undo

Undo the latest change.

10 OK

Confirm any changes made to the setup.

A B C

You can also use the click buttons referring to the buttons on the touch screen.

 Wireless communication

H Home

G Guests

Indicator icons

THE INDICATOR ICONS will show in the top right corner of the touch screen. Except in the setup menus.



Automatic horn on



Automatic horn off



Battery fully charged



Battery working



Battery charging



Battery low



Battery really low – **charge now!**



Battery critically low – **charge now!**



All zones active



Multiple zones active



All zones disabled



Zone 1-4



COLLISION – another NAUCON-1000 is transmitting in the same zone.

***Change or disable zones. See more on page 7.**

**Note you might see the flashing collision warning even when all zones are turned off.*

Start setting up your NAUCON-1000

When starting your NAUCON-1000 it will start up in a default sport. If setting up for the first time the NAUCON-1000 will start in basketball. To exit the sport press the **MENU** click button on the console and then press **EXIT SPORT**.

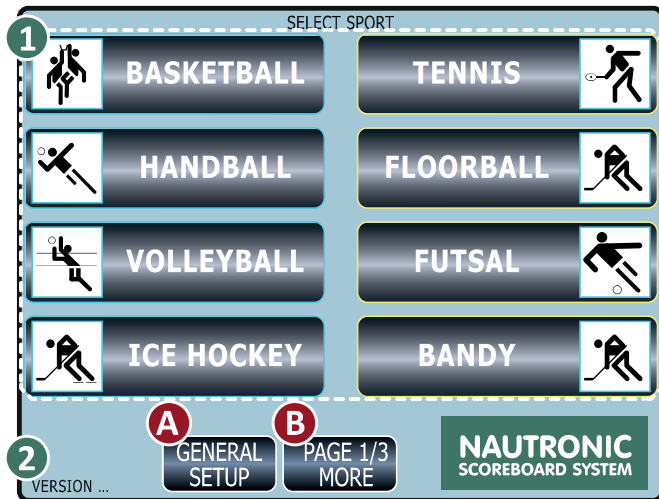 


Fig. 1 – Select sport

Fig. 1 – Select sport:

- 1 Select sport**
The choices of sports are listed in a menu – to scroll the menu press **PAGE 1/3 MORE**. Choose a sport and you are ready to start/setting up.
- 2 Version ...**
Shows the latest version of software installed on the NAUCON-1000 unit.

Fig. 1 – Bottom buttons:

- A General setup**
Enter GENERAL SETUP menu. For details see the section, starting below.
- B Page 1/3 more**
Press **PAGE 1/3 MORE** to scroll the pages in the menu.

General setup

In this part of the manual you can learn more about the general setup of your NAUCON-1000. You can enter the **GENERAL SETUP** menu from the **SELECT SPORT** menu.



Fig. 2 – General setup menu, page 1/2. The bottom buttons are elaborated on the next page.

Fig. 2 – General setup “Page 1/2”:

- 1 Date, year and time of day**
You can change the day, month, year and time of day. Once set, the NAUCON-1000 unit will transmit the changes to the Scoreboard. It will now receive time, date and year information from the main scoreboard. The NAUCON-1000 does not have a built-in timer.
- 2 Language**
Scroll through the various languages.
- 3 Start-up sport**
Set the default START-UP SPORT.

4 Text flow direction

Adjust the direction of the rolling text line. LEFT or RIGHT.

5 Board zone selection menu

Turns the zones ON and OFF. As default, all zones are on. If another NAU-CON-1000 are transmitting in the same zone, they might interfere.

6 Board info

The NAUCON-1000 starts searching for scoreboards in the activated zones.
→ If a scoreboard is turned on and connected to the NAUCON-1000, the address*¹ from the scoreboard, sideboard, sideboard or shot clocks are displayed on the touch screen.

*¹An address is a reference number (10-69) in the BOARD ZONES SETUP menu, see page 14.

Fig. 3 – General setup “Page 2/2”:

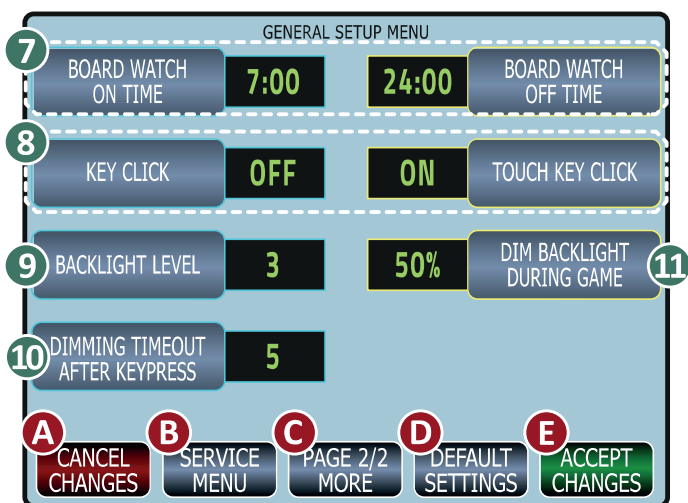 


Fig. 3 – General setup menu, page 2/2

7 Board watch – on and off time

By default the clock on the board will start up at 07:00 and turn off again at midnight. You can change both settings.

Set the clock to be on **or** off at all time:

00:00-24:00: The clock is always on.

00:00-00:00: The clock is always off.

8 Key click

Turn ON or OFF a sound for the buttons on the touch screen or/and the physical click buttons on the console.

9 Backlight level

Adjusts the light intensity of the touch screen. 1 is lowest and 5 is highest intensity. Lower level will extend the battery performance.

10 Dimming timeout after keypress

Time before dimming the backlight on the touch screen (0-99 min.).

11 Dim backlight during game

Adjusts the light intensity of the touch screen during the game (0-99% of the backlight level).

Fig. 3 and 4 – Bottom buttons:

A Cancel changes

Exists the setup menu without saving any changes made. A warning will appear before existing to the previous screen.

B Service menu

Enter the **SERVICE MENU**.
→ Please ask your local sales partner for a password to enter this menu.

C Page (1/2) 2/2 more

Press **PAGE (1/2) 2/2 MORE** to scroll the pages in the menu.

D Default settings

Press **DEFAULT SETTINGS** if you want to return to the NAUCON-1000's default settings.

E Accept changes

Press **ACCEPT** changes if you want to save your changes. You will then return to the **SELECT SPORT** menu.

Floorball setup

Choose FLOORBALL from the SELECT SPORT MENU. Then press the **SETUP** click button on the console and you will see a menu like shown below, *Fig. 19a*.

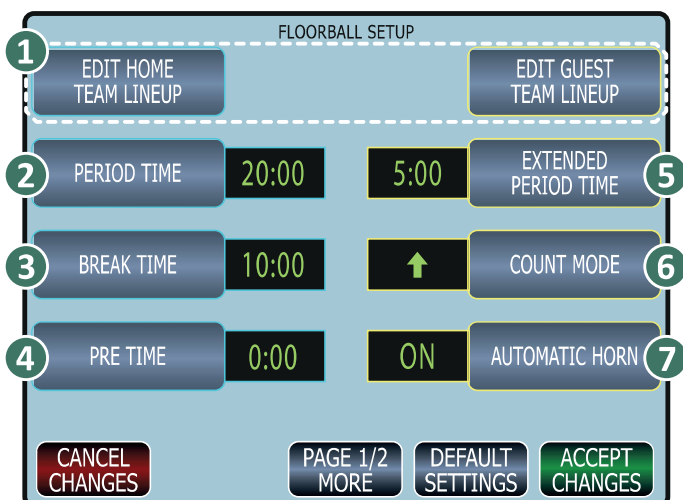 


Fig. 19a – Setup Floorball “Page 1/2”

Fig. 19a – “Page 1/2”:

- 1 **Edit lineups**
Choose either to edit HOME or GUEST team lineup. You will enter a screen where you can change the names and numbers of the players, *see page 40*.
- 2 **Period time**
Sets the length of a period. Default is 20 minutes.
- 3 **Break time**
Sets the length of the breaks between periods. Default is 10 minutes.
- 4 **Pre time**
Sets the length of the pre time / the time counting down before the match. Default is 0 minutes
- 5 **Extended period time**
Sets the length of an extended period. Default is 5 minutes.
- 6 **Count mode**
Sets game clock to count DOWN or count UP. Default is UP.

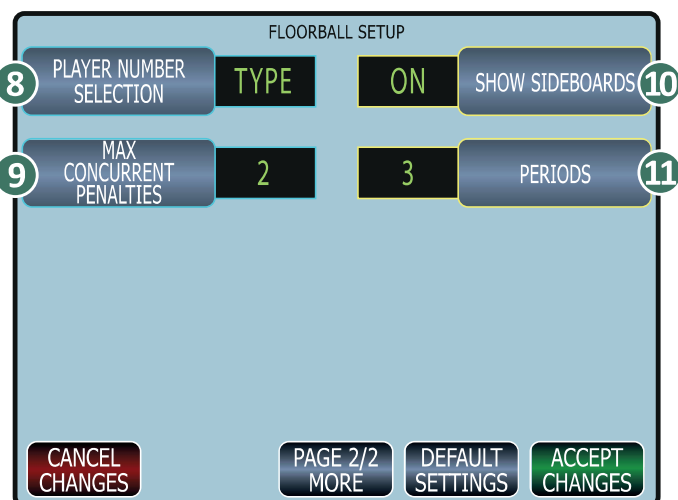 


Fig. 19b – Setup Floorball “Page 2/2”

7 **Automatic horn**

Turns the automatic horn ON or OFF. Default is ON.

Fig. 19b – “Page 2/2”:

- 8 **Player number selection**
Choose whether scores and penalties are given to a specific player or to the whole team. Default is TYPE.

LIST: Choose player number from a list.
TYPE: Type player number.
OFF: Scores and penalties are given to the whole team
- 9 **Max concurrent penalties**
Sets the max of penalties (1-5). Default: 2.
- 10 **Show sideboards**
Turns the sideboards ON or OFF. Default is ON.
- 11 **Periods**
Sets the number of periods in the match. Default is 3.